


Simple Table

Adjustable Table Frame

Kit Instructions

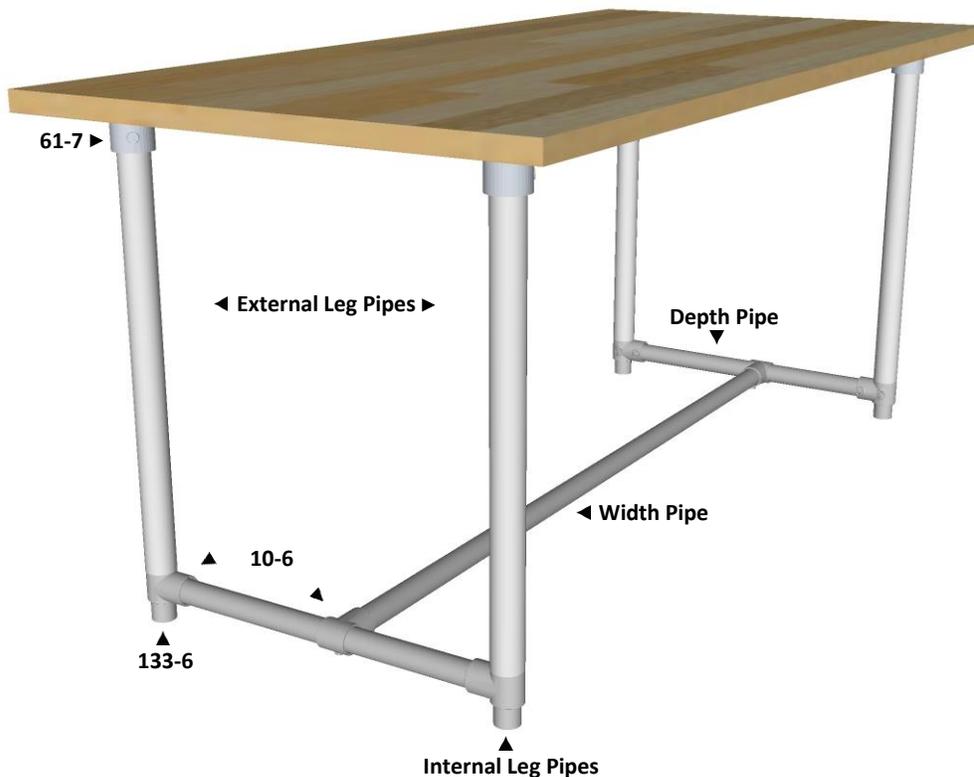

Parts

Standard Table Parts

Qty Part

4	61-7 Flanges
6	10-6 Single Socket Tees
4	133-6 Plastic Plugs
4	External Leg Pipes
4	Internal Leg Pipes
2	Depth Pipes
1	Width Pipe

Tools

- Allen Key (included)
- Hammer (for plugs)
- Screw Driver
- Level

Basic Installation Instructions

1. Confirm that you have all the required parts.
2. Assemble the parts according to the enclosed diagram.
3. When you initially assemble the unit loosely tighten the fitting set screws. After the unit is completely assembled, fully tighten all set screws.
4. If installing plugs, place cloth over plug and hammer into place.

Troubleshooting

If the table seems wobbly, loosen the set screws and adjust the pipes until the table is stable.

Questions or Installation Problems?

Customer Service | 1.888.527.2278

Simple Table

Adjustable Table Frame

Kit Instructions

Step by Step Instructions

- 1) Start by attaching the 10-6 Tees to end of Width Pipe.
- 2) Now slide each Depth Pipe through the 10-6 Tees on Width Pipe.
- 3) Attach the remaining 10-6 Tees to the ends of Depth Pipe.
- 4) Slide Internal Leg Pipes into the 10-6 Tees and leave about 3 inches sticking out. Tighten setscrews lightly.
- 5) Slide External Legs onto the top of Internal Legs.
- 6) Attach the 61-7 flanges on the top of External Legs.
- 7) Place your desktop on the ground, with the bottom facing up.
- 8) Flip the pipe frame over so that the 61-7 flanges are now lying flat on the bottom of the desktop. Be careful doing this because External Legs will want to come off Internal Legs when you turn it over.
- 9) Move the legs of the frame on the desktop until the 61-7 flanges are about 4 inches from each edge.
- 10) Attach the 61-7 flanges to the desktop with the appropriate fastener (fasteners not provided).
- 11) Pound the 133-6 plastic plugs into the bottom of Internal Legs.
- 12) Turn the desk right side up! You are done! You can adjust the individual fittings to make sure that everything is level and square.

Adjusting the Desk Height

The height of the desk is adjusted by letting more or less of the Internal Legs slip out from the External Legs. The 10-6 fittings hold the External Legs in place, while letting the Internal Legs through to a certain point.

To adjust the desk, simply loosen the setscrew on the 10-6 fittings on each leg, slide the Internal Legs to the desired height and then retighten the set screw.

A video of this process is available on the product page of our web site. <http://bit.ly/1dNK8XB>